anasonic



Slim type safety relays

SF RELAYS Slim type



RoHS compliant

Protective construction: Flux-resistant type

FEATURES

1. Acquisition of Korean safety certification ("S" mark)

Excluding with diode type

- 2. Forcibly guided contact structure
- 3. Slim profile (mm inch)


 $40/50 \text{ (L)} \times 13 \text{ (W)} \times 24 \text{ (H)}$ $1.575/1.969 (L) \times .512 (W) \times .945 (H)$

- 4. Fast response time is achieved (8 ms or less).
- 5. With diode and LED indication type available
- 6. Sockets and terminal sockets (spade and ring tongue terminal compatible) are available.

TYPICAL APPLICATIONS

- 1. Machine tools
- 2. Robots
- 3. Safety PLCs
- 4. Circuits with stringent safety standard requirements such as those in motor vehicle production equipment.

ORDERING INFORMATION

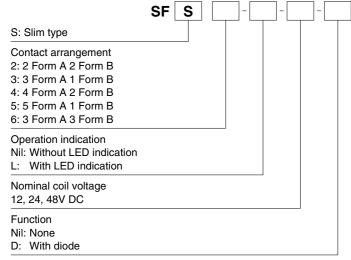

Notes: 1. Please consult us about other coil voltages.

2. LED indication color is green.

© Panasonic Corporation 2015

TYPES

1. Standard type

Contact arrangement		Nominal coil voltage	Without LED indication	With LED indication	
		Nominal con voltage	Part No.	Part No.	
		12 V DC	SFS2-DC12V	SFS2-L-DC12V	
	2 Form A 2 Form B	24 V DC	SFS2-DC24V	SFS2-L-DC24V	
4 polos		48 V DC	SFS2-DC48V	SFS2-L-DC48V	
4 poles		12 V DC	SFS3-DC12V	SFS3-L-DC12V	
	3 Form A 1 Form B	24 V DC	SFS3-DC24V	SFS3-L-DC24V	
		48 V DC	SFS3-DC48V	SFS3-L-DC48V	
	4 Form A 2 Form B	12 V DC	SFS4-DC12V	SFS4-L-DC12V	
		24 V DC	SFS4-DC24V	SFS4-L-DC24V	
		48 V DC	SFS4-DC48V	SFS4-L-DC48V	
	5 Form A 1 Form B	12 V DC	SFS5-DC12V	SFS5-L-DC12V	
6 poles		24 V DC	SFS5-DC24V	SFS5-L-DC24V	
		48 V DC	SFS5-DC48V	SFS5-L-DC48V	
	3 Form A 3 Form B	12 V DC	SFS6-DC12V	SFS6-L-DC12V	
		24 V DC	SFS6-DC24V	SFS6-L-DC24V	
		48 V DC	SFS6-DC48V	SFS6-L-DC48V	

Standard packing: Carton: 50 pcs.; Case: 200 pcs.

2. With diode and LED indication type

C	ontact arrangement	Nominal coil voltage	Part No.
		12 V DC	SFS2-L-DC12V-D
	2 Form A 2 Form B	24 V DC	SFS2-L-DC24V-D
4 polos		48 V DC	SFS2-L-DC48V-D
4 poles		12 V DC	SFS3-L-DC12V-D
	3 Form A 1 Form B	24 V DC	SFS3-L-DC24V-D
		48 V DC	SFS3-L-DC48V-D
	4 Form A 2 Form B	12 V DC	SFS4-L-DC12V-D
		24 V DC	SFS4-L-DC24V-D
		48 V DC	SFS4-L-DC48V-D
	5 Form A 1 Form B	12 V DC	SFS5-L-DC12V-D
6 poles		24 V DC	SFS5-L-DC24V-D
		48 V DC	SFS5-L-DC48V-D
	3 Form A 3 Form B	12 V DC	SFS6-L-DC12V-D
		24 V DC	SFS6-L-DC24V-D
		48 V DC	SFS6-L-DC48V-D

Standard packing: Carton: 50 pcs.; Case: 200 pcs.

RATING

1. Coil data

Contact arrangement		Nominal coil voltage	Pick-up voltage (at 20°C 68°F)	Drop-out voltage (at 20°C 68°F)	Nominal operating current [±10%] (at 20°C 68°F)	Coil resistance [±10%] (at 20°C 68°F)	Nominal operating power (at 20°C 68°F)	Max. applied voltage (at 20°C 68°F)
		12V DC		10%V or more of nominal voltage (Initial)	30 mA	400Ω	Approx. 360mW	110%V of nominal voltage
	2 Form A 2 Form B	24V DC			15 mA	$1,600\Omega$		
4 polos		48V DC			7.5mA	$6,400\Omega$		
4 poles		12V DC			30 mA	400Ω		
	3 Form A 1 Form B	24V DC			15 mA	1,600Ω		
		48V DC			7.5mA	$6,400\Omega$		
	4 Form A 2 Form B	12V DC	75%V or less of nominal voltage (Initial)		41.7mA	288Ω		
		24V DC			20.8mA	$1,152\Omega$		
		48V DC			10.4mA	4,608Ω		
		12V DC			41.7mA	288Ω		
6 poles	5 Form A 1 Form B	Form A 1 Form B 24V DC		20.8mA	1,152Ω	Approx. 500mW		
		48V DC			10.4mA	4,608Ω		
	3 Form A 3 Form B	12V DC			41.7mA	288Ω		
		24V DC	1		20.8mA	1,152Ω		
		48V DC			10.4mA	4,608Ω		

Note: The nominal operating current will increase by approximately 2mA due to the LED on the LED indication type.

^{*} Sockets and terminal sockets available.

^{*} Sockets and terminal sockets available.

2. Specifications (relay)

Ob t i - ti	istics Item		Specifications			
Characteristics			4 poles	6 poles		
	Contact arrangement		2 Form A 2 Form B 3 Form A 1 Form B	4 Form A 2 Form B 5 Form A 1 Form B 3 Form A 3 Form B		
Contact	Contact resistance (Initial)		Max. 100 m Ω (By voltage drop 6 V DC 1A)			
	Contact material		Au flashed AgSnO₂ type			
	Nominal switc	hing capacity (resistive load)	6A 250V AC, 6A 30V DC			
	Max. switching power (resistive load)		1,500VA, 180W			
Dating	Max. switching voltage		250V AC, 125V DC			
Rating	Max. switching	g current	6 A (Reduce by 0.1 A/°C for temperatures 70 to 85°C 158 to 185°F)			
	Min. switching	capacity (Reference value)*1	1mA 5V DC			
	Nominal opera	ating power	Approx. 360mW	Approx. 500mW		
	Insulation resi	stance (Initial)	Min. 1,000MΩ (at 500V DC) Measuremer	nt at same location as "Breakdown voltage" section.		
		Between open contacts	1,500 Vrms for 1 min. (Detection current:	10mA)		
	Breakdown voltage (Initial)	Between contact sets	2,500 Vrms for 1 min. (Detection current: 10mA); 7-8/9-10 between open contacts	2,500 Vrms for 1 min. (Detection current: 10mA); 7-8/11-12 between open contacts 9-10/13-14 between open contacts 11-12/13-14 between open contacts		
Electrical characteristics			4,000 Vrms for 1 min. (Detection current: 10mA); 3-4/5-6 between open contacts 3-4/7-8 between open contacts 5-6/9-10 between open contacts	4,000 Vrms for 1 min. (Detection current: 10mA); 3-4/5-6 between open contacts 3-4/7-8 between open contacts 5-6/9-10 between open contacts 7-8/9-10 between open contacts		
		Between contact and coil	4,000 Vrms for 1min (Detection current: 1	0mA)		
	Operate time	(at 20°C 68°F)	Max. 20ms (Nominal coil voltage applied to the coil, excluding contact bounce time)			
	Response time (at 20°C 68°F)*2		Max. 8ms (Nominal coil voltage applied to the coil, excluding contact bounce time and without diode)*4			
	Release time	(at 20°C 68°F)	Max. 20ms (Nominal coil voltage applied to the coil, excluding contact bounce time)			
	Shock	Functional	200 m/s² (Half-wave pulse of sine wave: 1	11 ms; detection time: 10μs)		
Mechanical	resistance	Destructive	1,000 m/s² (Half-wave pulse of sine wave: 6 ms)			
characteristics	Vibration	Functional	10 to 55 Hz at double amplitude of 1.5 mi	m (Detection time: 10μs)		
	resistance	Destructive	10 to 55 Hz at double amplitude of 1.5 mm			
	Mechanical		Min. 10 ⁷ (at 180 times/min.)			
			250 V AC 6 A resistive load: Min. 10 ⁵ (at 20 times/min.)			
			30 V DC 6 A resistive load: Min. 10 ⁵ (at 20 times/min.)			
Expected life	Floatrical		250 V AC 1 A resistive load: Min. 5×10 ⁵ (at 30 times/min.)			
	Electrical		30 V DC 1 A resistive load: Min. 5×10 ⁵ (at 30 times/min.)			
			[AC 15] 240 V AC 2 A inductive load: Min. 10 ⁵ (at 20 times/min., cosφ = 0.3)			
			[DC 13] 24 V DC 1 A inductive load: Min. 10 ⁵ (at 20 times/min., L/R = 48 ms)			
Conditions	Conditions for storage*3	operation, transport and	Ambient temperature: -40°C to +85°C -40°F to +185°F Humidity: 5 to 85% R.H. (Not freezing and condensing at low temperature)			
	Max. operating	g speed	20 times/min. (at max. rating)			
Unit weight			Approx. 20 g .71 oz	Approx. 23 g .81 oz		

Notes: *1. This value can change due to the switching frequency, environmental conditions, and desired reliability level, therefore it is recommended to check this with the actual load.


*2. Response time is the time after the coil voltage turns off until the time when "a" contact turns off.

^{*3.} The upper limit of the ambient temperature is the maximum temperature that can satisfy the coil temperature rise value. Refer to Usage, transport and storage conditions in NOTES.

^{*4.} Response time of built-in diode type is 12 ms or less (excluding contact bounce time when nominal coil voltage is applied to the coil).

REFERENCE DATA


1. Operate/response/release time Tested sample: SFS4-DC24V (4 Form A 2 Form B), 20pcs. (a contacts: 80, b contacts: 40)

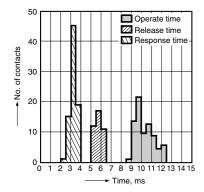

2. Coil temperature rise


Tested sample: SFS4-DC24V (4 Form A 2 Form B),

Measured portion: Inside the coil Ambient temperature: Room temperature (27°C 80.6°F), 70°C 158°F, 85°C 185°F

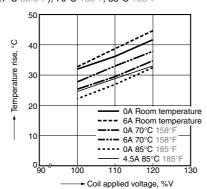


3. Malfunctional shock

Tested sample: SFS4-DC24V (4 Form A 2 Form B),

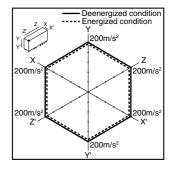

4. Max, switching capacity

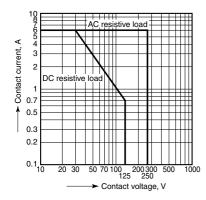

Other contact gaps when contacts are welded

Sample: SFS4-DC24V (4 Form A 2 Form B)

The table below shows the state of the other contacts.

In case of form "NO" contact weld the coil applied voltage is 0 V.

In case of form "NC" contact weld the coil applied voltage is nominal.

		State of other contacts					
		3-4 (NC)	5-6 (NC)	7-8 (NO)	9-10 (NO)	11-12 (NO)	13-14 (NO)
	3-4 (NC)			>0.5	>0.5	>0.5	>0.5
	5-6 (NC)			>0.5	>0.5	>0.5	>0.5
Welded contact No.	7-8 (NO)	>0.5	>0.5				
weided contact No.	9-10 (NO)	>0.5	>0.5				
	11-12 (NO)	>0.5	>0.5				
	13-14 (NO)	>0.5	>0.5				

>0.5: contact gap is kept at min. 0.5 mm .020inch Empty cells: either ON or OFF

Note: Contact gaps are shown at the initial state.

If the contact transfer is caused by load switching, it is necessary to check the actual loading.

DIMENSIONS (mm inch)


The CAD data of the products with a CAD Data mark can be downloaded from: http://industrial.panasonic.com/ac/e/

1. 4 poles (2 Form A 2 Form B, 3 Form A 1 Form B)


CAD Data



External dimensions

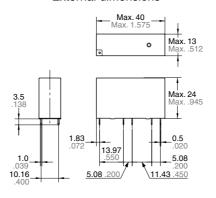

PC board pattern (Bottom view)

 


Tolerance: ±0.1 ±.004

(3 Form A 1 Form B)

General tolerance: ±0.3 ±.012

Schematic (Bottom view)

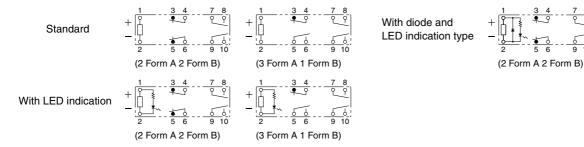



2. 6 poles (4 Form A 2 Form B, 5 Form A 1 Form B, 3 Form A 3 Form B)

CAD Data



External dimensions

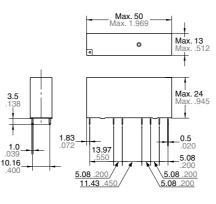


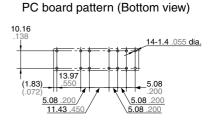

Tolerance: ±0.1 ±.004

General tolerance: ±0.3 ±.012

Schematic (Bottom view)

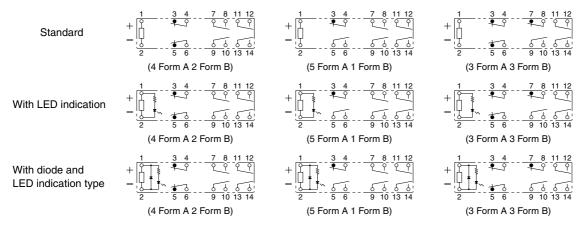

SAFETY STANDARDS

Certification authority	File No.	
UL/C-UL	E43149*	6A 277V AC, 6A 30V DC
TÜV	B 15 05 13461 346	6A 250V AC (cosφ=1.0), 6A 30V DC (0ms), AC15: 2A 240V AC (cosφ=0.3), DC13: 1A 24V DC (L/R 48ms)

^{*} CSA standard: Certified by C-UL

NOTES

1. For cautions for use, please read "GENERAL **APPLICATION GUIDELINES".**

2. Coil operating power

Pure DC current should be applied to the coil. If it includes ripple, the ripple factor should be less than 5%. However, check it with the actual circuit since the characteristics may be slightly different.

The wave form should be rectangular.

3. Coil connection

When connecting coils, refer to the wiring diagram to prevent mis-operation or malfunction.

4. Cleaning

This relay is not sealed, therefore, immersion may cause failure. Be careful that flux does not overflow onto the PC board or penetrate inside the relay.

5. Soldering

When using automatic soldering, the following conditions are recommended

- 1) Preheating: 120°C 248°F, within 120 Sec (PC board solder surface)
- 2) Soldering: 260°C±5°C 500°F±41°F, within 6 Sec

6. Other

- 1) If the relay has been dropped, the appearance and characteristics should always be checked before use.
- 2) The switching lifetime is defined under the standard test condition specified in the JIS* C 5442-1996 standard (temperature 15 to 35°C 59 to 95°F, humidity 25 to 75%). Check this with the actual product as it is affected by the coil driving circuit, load type, activation frequency, activation phase, ambient conditions and other factors.

Also, be especially careful with loads such as those listed below. (1) When used for AC load-operation and the operating phase is synchronous. Rocking and fusing can easily occur due to contact shifting.

(2) During high frequency on/off operation with certain loads, arcing may occur at the contacts. This can cause fusion to Oxygen and Nitrogen gas in the air creating Nitric Acid (HNO₃) which can cause corrosion to the contacts.

Please see the following countermeasure examples:

- 1. Incorporate an arc-extinguishing circuit.
- 2. Lower the operating frequency
- 3. Lower the ambient humidity

Downloaded from Arrow.com.

- 3) For secure operations, nominal coil voltage should be applied. In addition, please note that pick-up and drop-out voltage will vary according to the ambient temperature and operating conditions.
- 4) Heat, smoke, and/or fire may occur if the relay is used outside the allowable ranges for the coil ratings, contact ratings. operating cycle lifetime, and other specifications. Therefore, do not use the relay if these ratings are exceeded. Also, make sure that the relay is wired correctly.
- 5) Incorrect wiring may cause false operation or generate heat or
- 6) Check the ambient conditions when storing or transporting the relays and devices containing the relays. Freezing or condensation may occur in the relay causing damage. Avoid exposing the relays to heavy loads, or strong shock and vibration.


7. Usage, transport and storage conditions

- 1) Ambient temperature, humidity, and atmospheric pressure during usage, transport, and storage of the relay:
- (1) Temperature: -40 to +85°C -40 to +185°F

(When the temperature is 70 to 85°C 158 to 185°F, reduce the 6 A max. switching current by 0.1 A/°C.)

- (2) Humidity: 5 to 85% RH (Avoid freezing and condensation.) The humidity range varies with the temperature. Use within the range indicated in the graph below.
- (3) Atmospheric pressure: 86 to 106 kPa

Temperature and humidity range for usage, transport, and storage

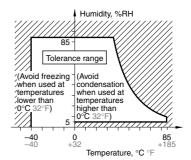

2) Condensation

Condensation forms when there is a sudden change in temperature under high temperature and high humidity conditions. Condensation will cause deterioration of the relay insulation.

3) Freezing

Condensation or other moisture may freeze on the relay when the temperatures is lower than 0°C 32°F. This causes problems such as sticking of movable parts or operational time lags.

4) Low temperature and low humidity

At low temperature, low humidity environments, the plastic becomes brittle.

© Panasonic Corporation 2015

Please note corrections.

8. Please connect DC coil types with LED and built-in diode correctly by verifying the coil polarity ("+" and "-"). Connecting with reverse polarity will cause the LED not to light and damage the built-in diode due to its specification.

anasonic

ACCESSORIES

Slim type (Sockets and DIN rail terminal sockets)

TYPES

1. Sockets

Туре	No. of poles	Part No.
PC hoard sockats	4 poles	SFS4-PS
PC board sockets	6 poles	SFS6-PS

Standard packing: Carton: 10 pcs.; Case: 100 pcs.

2. DIN rail terminal socket

Туре	No. of poles	Part No.
Terminal sockets	4 poles	SFS4-SFD-R
for spade and ring tongue terminals	6 poles	SFS6-SFD-R

Standard packing: Carton: 10 pcs.; Case: 100 pcs

Note: For previous products (spade tongue terminal dedicated terminal sockets), please order SFS4-SFD for 4 poles and SFS6-SFD for 6 poles.

RATING

Specifications

Item	Specifications	
Breakdown voltage (Initial)	Between each terminal: 2,500 Vrms for 1 min. (Detection current: 10mA)	
Insulation resistance (Initial)	Min. 1,000MΩ (at 500V DC) Measurement at same location as "Breakdown voltage" section.	
Max. carrying current	6 A (Reduce by 0.1 A/°C for temperatures 70 to 85°C 158 to 185°F)	

 
DIMENSIONS (mm inch)

The CAD data of the products with a CAD Data mark can be downloaded from: http://industrial.panasonic.com/ac/e/


1. PC board sockets (4 poles) (SFS4-PS)

CAD Data






External dimensions

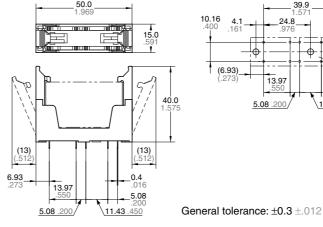


PC board pattern (Bottom view)

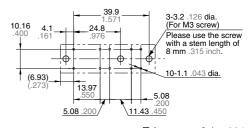


Tolerance: ±0.1 ±.004


Schematic (Bottom view)

  Standard






With LED indication

 


(When 2 Form A 2 Form B mounted)

 


(When 3 Form A 1 Form B mounted)

 With diode and LED indication type



(When 2 Form A 2 Form B mounted)

 


(When 3 Form A 1 Form B mounted)

-1-

2. PC board sockets (6 poles) (SFS6-PS) External dimensions PC board pattern (Bottom view) CAD Data 3-3.2 .126 dia. (For M3 screw) Please use the screw with a stem length of 8 mm .315 inch. (6.93) 5.08 .200 Tolerance: ±0.1 ±.004 **0.4** .016 13.97 10.16 5.08 General tolerance: ±0.3 ±.012 Schematic (Bottom view) Standard (When 5 Form A 1 Form B mounted) (When 3 Form A 3 Form B mounted) With LED indication (When 4 Form A 2 Form B mounted) (When 5 Form A 1 Form B mounted) (When 3 Form A 3 Form B mounted)

3. Terminal socket for spade and ring tongue terminals (For 4 poles finger protect type)

(When 4 Form A 2 Form B mounted)

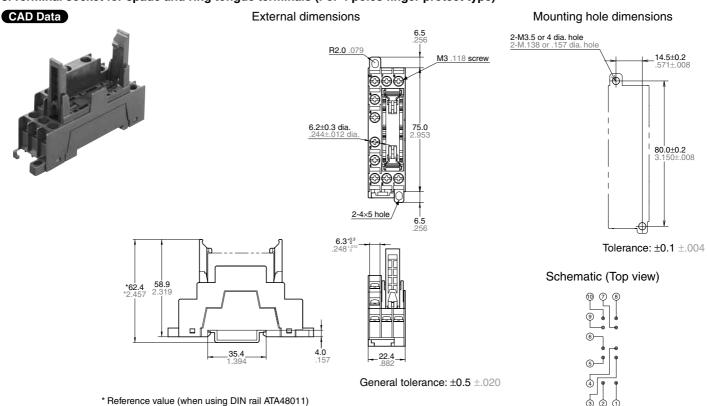

(When 5 Form A 1 Form B mounted)

Note: Ring tongue terminals cannot be used with conventional DIN rail terminal socket (SFS4-SFD). In use of a ring tongue terminals, please use SFS4-SFD-R.

(When 3 Form A 3 Form B mounted)

With diode and LED indication type

4. Terminal socket for spade and ring tongue terminals (For 6 poles finger protect type)

External dimensions Mounting hole dimensions 2-M3.5 or 4 dia hole 2-M1.198 or 157 dia hole 2-M


* Reference value (when using DIN rail ATA48011)

Note: Ring tongue terminals cannot be used with conventional DIN rail terminal socket (SFS6-SFD). In use of a ring tongue terminals, please use SFS6-SFD-R.

NOTES

Installation

- 1) Attach directly to the chassis or use a DIN rail.
- (1) When attaching directly to chassis
- Use a M3.5 screw, spring washer, and hex nut.
- For the mounting pitch, refer to the dimensions.
- (2) When installing on a DIN rail
- Use a 35 mm 1.378 inch wide DIN rail (DIN46277).
- Install and remove as shown in the figures below.

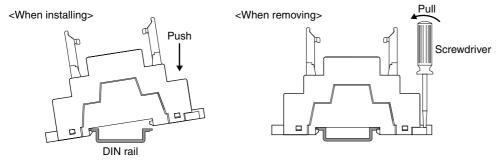

2) Refer to the figure below for applicable wire-pressed terminals.



GUIDELINES FOR POWER, HIGH-CAPACITY DC CUT OFF AND SAFETY RELAYS USAGE

For cautions for use, please read "GUIDELINES FOR RELAY USAGE". https://industrial.panasonic.com/ac/e/control/relay/cautions_use/index.jsp

Precautions for Coil Input

■Long term current carrying

A circuit that will be carrying a current continuously for long periods without relay switching operation. (circuits for emergency lamps, alarm devices and error inspection that, for example, revert only during malfunction and output warnings with form B contacts) Continuous, long-term current to the coil will facilitate deterioration of coil insulation and characteristics due to heating of the coil itself.

For circuits such as these, please use a magnetic-hold type latching relay. If you need to use a single stable relay, use a sealed type relay that is not easily affected by ambient conditions and make a failsafe circuit design that considers the possibility of contact failure or disconnection.

■DC Coil operating power

Steady state DC current should be applied to the coil. The wave form should be rectangular. If it includes ripple, the ripple factor should be less than 5%.

However, please check with the actual circuit since the electrical characteristics may vary. The rated coil voltage should be applied to the coil and the set/reset pulse time of latching type relay differs for each relays, please refer to the relay's individual specifications.

■ Coil connection

When connecting coils of polarized relays, please check coil polarity (+,-) at the internal connection diagram (Schematic). If any wrong connection is made, it may cause unexpected malfunction, like abnormal heat, fire and so on, and circuit do not work. Avoid impressing voltages to the set coil and reset coil at the same time.

Maximum allowable voltage and temperature rise

Proper usage requires that the rated coil voltage be impressed on the coil. Note, however, that if a voltage greater than or equal to the maximum continuous voltage is impressed on the coil, the coil may burn or its layers short due to the temperature rise. Furthermore, do not exceed the usable ambient temperature range listed in the catalog.

Operate voltage change due to coil temperature rise (Hot start)

In DC relays, after continuous passage of current in the coil, if the current is turned OFF, then immediately turned ON again, due to the temperature rise in the coil, the pick-up voltage will become somewhat higher. Also, it will be the same as using it in a higher temperature atmosphere. The resistance/temperature relationship for copper wire is about 0.4% for 1°C, and with this ratio the coil resistance increases. That is, in order to operate of the relay, it is necessary that the voltage be higher than the pick-up voltage and the pick-up voltage rises in accordance with the increase in the resistance value. However, for some polarized relays, this rate of change is considerably smaller.

Ambient Environment

•Usage, Transport, and Storage Conditions

During usage, storage, or transportation, avoid locations subjected to direct sunlight and maintain normal temperature, humidity and pressure conditions.

Temperature/Humidity/Pressure

When transporting or storing relays while they are tube packaged, there are cases the temperature may differ from the allowable range. In this case be sure to check the individual specifications.


Also allowable humidity level is influenced by temperature, please check charts shown below and use relays within mentioned conditions. (Allowable temperature values differ for each relays, please refer to the relay's individual specifications.)

1) Temperature:

The tolerance temperature range differs for each relays, please refer to the relay's individual specifications

2) Humidity: 5 to 85 % RH

3) Pressure: 86 to 106 kPa

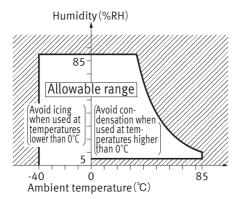

Dew condensation

Condensation occurs when the ambient temperature drops suddenly from a high temperature and humidity, or the relay is suddenly transferred from a low ambient temperature to a high temperature and humidity. Condensation causes the failures like insulation deterioration, wire disconnection and rust etc.

Panasonic Corporation does not guarantee the failures caused by condensation.

The heat conduction by the equipment may accelerate the cooling of device itself, and the condensation may occur.

Please conduct product evaluations in the worst condition of the actual usage. (Special attention should be paid when high temperature heating parts are close to the device. Also please consider the condensation may occur inside of the device.)

•lcing

Condensation or other moisture may freeze on relays when the temperature become lower than 0°C.This icing causes the sticking of movable portion, the operation delay and the contact conduction failure etc. Panasonic Corporation does not guarantee the failures caused by the icing.

The heat conduction by the equipment may accelerate the cooling of relay itself and the icing may occur. Please conduct product evaluations in the worst condition of the actual usage.

•Low temperature and low humidity

The plastic becomes brittle if the switch is exposed to a low temperature, low humidity environment for long periods of time.

•High temperature and high humidity

Storage for extended periods of time (including transportation periods) at high temperature or high humidity levels or in atmospheres with organic gases or sulfide gases may cause a sulfide film or oxide film to form on the surfaces of the contacts and/or it may interfere with the functions. Check out the atmosphere in which the units are to be stored and transported.

GUIDELINES FOR POWER, HIGH-CAPACITY DC CUT OFF AND SAFETY RELAYS USAGE

Package

In terms of the packing format used, make every effort to keep the effects of moisture, organic gases and sulfide gases to the absolute minimum.

Silicon

When a source of silicone substances (silicone rubber, silicone oil, silicone coating materials and silicone filling materials etc.) is used around the relay, the silicone gas (low molecular siloxane etc.) may be produced.

This silicone gas may penetrate into the inside of the relay. When the relay is kept and used in this condition, silicone compound may adhere to the relay contacts which may cause the contact failure. Do not use any sources of silicone gas around the relay (Including plastic seal types).

NOx Generation

When relay is used in an atmosphere high in humidity to switch a load which easily produces an arc, the NOx created by the arc and the water absorbed from outside the relay combine to produce nitric acid. This corrodes the internal metal parts and adversely affects operation. Avoid use at an ambient humidity of 85%RH or higher (at 20°C). If use at high humidity is unavoidable, please contact our sales representative.

Others

■ Cleaning

- Although the environmentally sealed type relay (plastic sealed type, etc.) can be cleaned, avoid immersing the relay into cold liquid (such as cleaning solvent) immediately after soldering. Doing so may deteriorate the sealing performance.
- 2) Cleaning with the boiling method is recommended(The temperature of cleaning liquid should be 40°C or lower). Avoid ultrasonic cleaning on relays. Use of ultrasonic cleaning may cause breaks in the coil or slight sticking of the contacts due to ultrasonic energy.

Please refer to "the latest product specifications" when designing your product.

•Requests to customers:

https://industrial.panasonic.com/ac/e/salespolicies/

Panasonic Corporation Please contact Electromechanical Control Business Division ■1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan industral.panasonic.com/ac/e/

ASCTB119E 201907

Downloaded from Arrow.com.

Panasonic®

Specifications are subject to change without notice.

©Panasonic Corporation 2019