


## ARM<sup>®</sup> Cortex<sup>™</sup>-M1-Enabled ProASIC3L Development Kit Quickstart Card

### Kit Contents – M1A3PL-DEV-KIT

Quantity	Description
1	M1A3PL Development Board with M1A3PL1000-FGG484; includes built-in FlashPro3-compatible programming circuit
1	+5.0 V external power supply with international adapters
2	USB A to mini-B USB cables
1	Actel Libero <sup>®</sup> Integrated Design Environment (IDE) DVD (check web for newer version before installing)
1	This Quickstart card

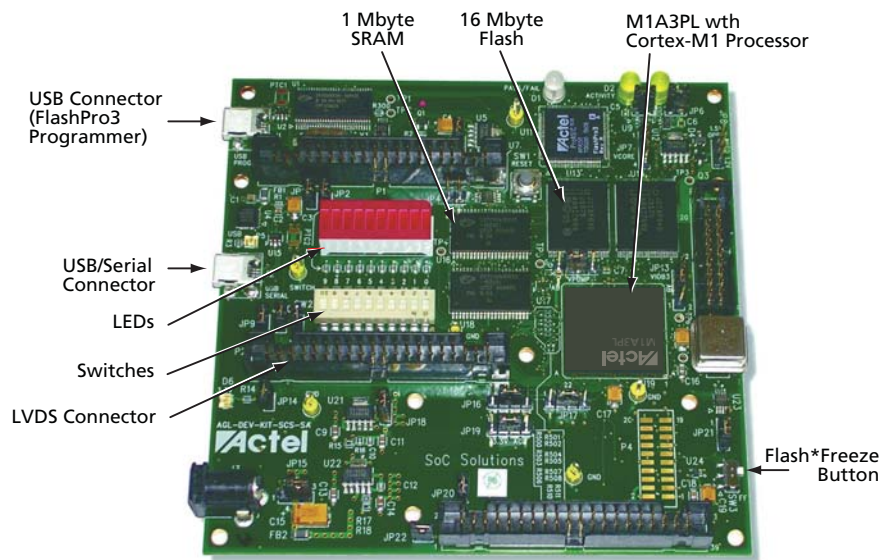

## Jumpers and Switch Settings

Before powering up the M1 ProASIC3L Development Board for the first time, make sure the switches and jumpers are in the following factory-set positions:

- SW2: All switches (0-9) are in the ON position.
- JP1, JP2, JP3 (2-3), JP4, JP6, JP7, JP9 (2-3), JP10, JP11, JP12, JP13 (2-3), JP14, JP15, JP16 (2-3), JP17(2-3), JP18 (2-3), JP19 (2-3), JP20 (1-2), JP21 (2-3), JP22 (1-4), JP23, JP24 are installed.
- All others are not installed.

For a full description of all jumpers, refer to the user's guide on the ARM Cortex-M1-Enabled ProASIC3L Development Kit web page.

## Running the Pre-Programmed Design

Press SW1 to reset. The LED on the board will perform a traffic light sequence. To follow this more clearly, go to the web page and install and run the traffic light.exe file.

## Software and Licensing

Check the Actel website ([www.actel.com](http://www.actel.com)) for a newer software version before installing from the DVD. In order to design with a Cortex-M1-enabled device, you should install both the Libero IDE and SoftConsole tools. SoftConsole is used for programming and debug of embedded processor designs.

Software releases: [www.actel.com/download/software/libero](http://www.actel.com/download/software/libero)

## Documentation Resources

For further kit information, including user's guide, tutorial, and full design examples, refer to the user's guide on the ARM Cortex-M1-Enabled ProASIC3L Development Kit web page.  
[www.actel.com/products/hardware/devkits\\_boards/m1proasic3l.aspx](http://www.actel.com/products/hardware/devkits_boards/m1proasic3l.aspx)

## Technical Support and Contacts

Technical support is available online at [www.actel.com/support](http://www.actel.com/support), by email at [tech@actel.com](mailto:tech@actel.com), or by phone:

Phone (NA): 800.262.1060

Phone (Int'l): +1 650.318.4460

Actel Sales offices, including Representatives and Distributors, are located worldwide. To find your local representative go to [www.actel.com/company/contact](http://www.actel.com/company/contact).