LT1942

DESCRIPTION

Demonstration Circuit DC688 is a quad output power supply intended for use in small to medium size TFT panels. The circuit features the LT1942 quad output switching regulator and generates an LED driver along with the triple output supply required for the TFT panels. With an input voltage range of 3V to 4.2V, two step-up regulators and one inverting regulator provide AV_DD, V_DD, and V_DF bias voltages for the LCD panels. Another high power boost is used to drive 12 LEDs (2 strings of 6 each). For 3V minimum input voltage, up to 20mA current is available for each LED string. A built-in LED ballast circuit is included to precisely match the LED currents in the two strings. The LED driver has a precise

dimming control. A voltage between 0.25V to 2.5V can be applied to CTRL4 pin to control the dimming level.

An internal high side PNP provides delayed turn on of the V_{on} signal for panel protection. A P-channel MOSFET driven by the output of PGOOD pin is added at the output of AV_{np} to provide output disconnect in shutdown.

All four switchers are synchronized to the internal 1MHz clock, allowing the use of low profile inductors and ceramic capacitors. Both the AV_{DD} boost converter and the LED driver have soft-start to limit inrush current.

Design files for this circuit board are available. Call the LTC factory.

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Output Voltage AV _{DD}	V _{IN} = 3V to 4.5V, I _{OUT} = 0mA to 40mA	5V ± 4%
Maximum Output Current at AV _{DD}	V _{IN} = 3V to 4.5V (Note 1)	40mA
Current at LED1 or LED2	$V_{IN} = 3V \text{ to } 4.5V, R7 = 4.99\Omega$	20mA ± 6%
Typical Output Ripple AV _{DD}	V _{IN} = 4V, load at AV _{DD} = 40mA (20MHz BW)	8mV _{P-P}
Typical Switching Frequency		1MHz
SHDN Control	Logic Low Voltage-Off, T _A = 25°C	0.4V MAX
	Logic High Voltage-On, T _A = 25°C	1.0V MIN

Note 1: The AVDD output can supply more current with a larger inductor. For example, it can deliver 50mA load current with Sumida CLS4D14-330 (33µH).

QUICK START PROCEDURE

Demonstration circuit 688 is easy to set up to evaluate the performance of the LT1942. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the input or one of the outputs and GND terminals. See Figure 2 for proper scope probe technique.

- 1. With power off, connect the input power supply to Vin and GND.
- 2. Place JP1 in RUN position; JP2 in ON position.
- 3. Set the input voltage between 3V to 4.5V. Turn on the power at the input.
- 4. Check for the proper output voltages. If any output voltage is lower than the set value, temporarily disconnect the load to make sure that the load is not set too high.



- **5.** Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.
- **6.** The LED driver can be turned off independently by putting JP2 in off position. LED dimming (2.5mA to

20mA each string) can be easily achieved by applying a voltage between 0.1V to 2.5V at CTRL4 pin. Refer to datasheet for more information.

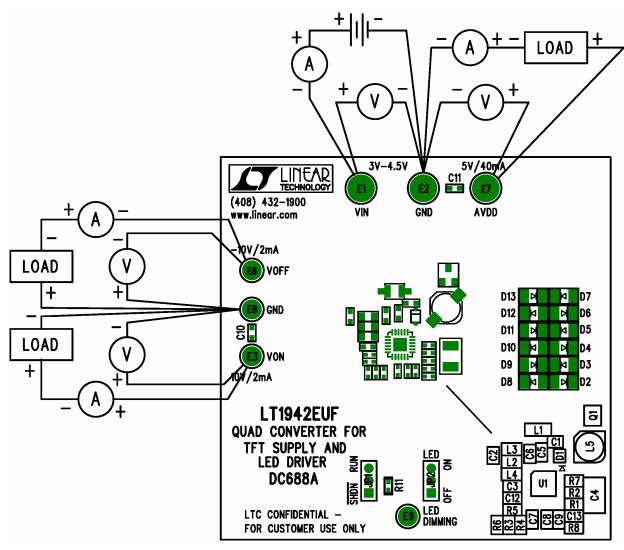


Figure 1. Proper Measurement Equipment Setup




Figure 2. Measuring Input or Output Ripple



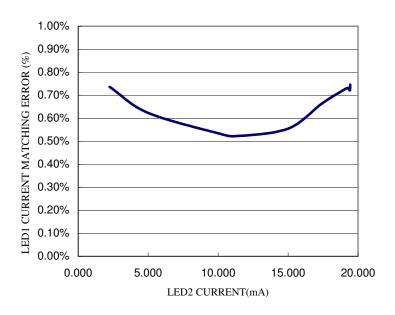


Figure 3. Typical current matching between LED1 and LED2

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 688 QUAD OUTPUT SWITCHING REGULATORS FOR TFT SUPPLY AND LED DRIVER

