
Panasonic Industry

Microwave Devices

RJ RELAYS

8 GHz max. capable, 1 W carrying power (at 5 GHz), 50 Ω impedance and 2 Form C relays

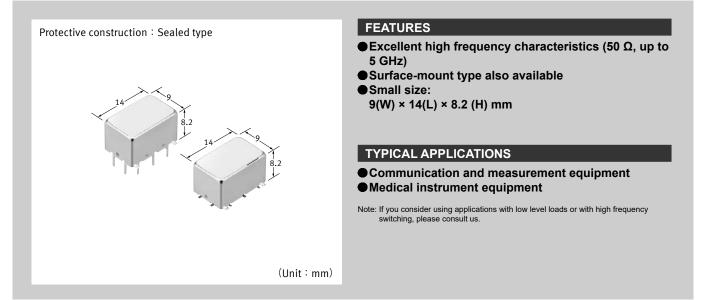


HIGH FREQUENCY CHARACTERISTICS

■50 Ω (Initial)

Frequ	Jency	Up to 5 GHz
V.S.W.F	8. (Max.)	1.25
Insertion loss (dB, Max.)		0.5*
lectetion (dD Min)	Between open contacts	35
Isolation (dB, Min.)	Between contact sets	30

*Not included PC board loss

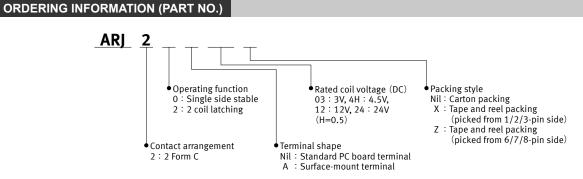

Note : Packing style symbol "X", "Z" is not marked on the relay.

2021.06 industrial.panasonic.com/ac/e/

-1-

© Panasonic Corporation 2021

TYPES

PC board terminal

Carton packing

Contact arrangement	Deted soil voltage	Part No.		Standard packing	
Contact arrangement	Rated coil voltage	Single side stable	2 coil latching	Inner carton	Outer carton
	3 V DC	ARJ2003	ARJ2203		
	4.5 V DC	ARJ204H	ARJ224H	50	500
2 Form C	12 V DC	ARJ2012	ARJ2212	50 pcs.	500 pcs.
	24 V DC	ARJ2024	ARJ2224		

Surface mount terminal

Carton packing

Contact arrangement	Batad apil valtage	Part No.		Standard packing	
Contact arrangement	Rated coil voltage	Single side stable	2 coil latching	Inner carton	Outer carton
	3 V DC	ARJ20A03	ARJ22A03		
0 Form 0	4.5 V DC	ARJ20A4H	ARJ22A4H	50	500
2 Form C	12 V DC	ARJ20A12	ARJ22A12	50 pcs.	500 pcs.
	24 V DC	ARJ20A24	ARJ22A24		

Tape and reel packing Z

		Part No.		Standard packing	
Contact arrangement	Rated coil voltage	Single side stable	2 coil latching	Inner carton (1-reel)	Outer carton
	3 V DC	ARJ20A03Z	ARJ22A03Z		
2 Form C	4.5 V DC	ARJ20A4HZ	ARJ22A4HZ	500 peo	1 000 pag
2 Form C	12 V DC	ARJ20A12Z	ARJ22A12Z	500 pcs.	1,000 pcs.
	24 V DC	ARJ20A24Z	ARJ22A24Z		

RATING

Coil data

• Operating characteristics such as 'Operate voltage' and 'Release voltage' are influenced by mounting conditions, ambient temperature, etc.

Therefore, please use the relay within $\pm 5\%$ of rated coil voltage.

• 'Initial' means the condition of products at the time of delivery.

• Single side stable

Rated coil voltage	Operate voltage* (at 20 °C)	Release voltage* (at 20 °C)	Rated operating current (±10%, at 20 °C)	Coil resistance (±10%, at 20 °C)	Rated operating power	Max. allowable voltage (at 70 °C)
3 V DC			66.7 mA	45 Ω		
4.5 V DC	Max. 75% V of rated coil voltage (Initial)	Min. 10% V of	44.4 mA	101.2 Ω	200 mW	110% V of rated
12 V DC		5	16.7 mA	720 Ω	200 11100	coil voltage
24 V DC			8.3 mA	2,880 Ω		

*square, pulse drive

2 coil latching

Rated coil voltage	Set voltage* (at 20 °C)	Reset voltage* (at 20 °C)	Rated operating current (±10%, at 20 °C)	Coil resistance (±10%, at 20 °C)	Rated operating power	Max. allowable voltage (at 70 °C)
3 V DC			50 mA	60 Ω		
4.5 V DC	Max. 75% V of	Max. 75% V of	33.3 mA	135 Ω	150 mW	110% V of rated
12 V DC	rated coil voltage (Initial)	rated coil voltage (Initial)	12.5 mA	960 Ω	150 11100	coil voltage
24 V DC		, ,	6.3 mA	3,840 Ω		

*square, pulse drive

Specifications

	Item	Specifications				
	Contact arrangement	2 Form C				
	Contact resistance (initial)	Max. 150 mΩ (by voltage drop 10 V C 10 mA)				
	Contact material	Au plating				
Contact data	Contact rating	1 W (5 GHz, 50 Ω, V.S.W.R.: Max. 1.25), 10 mA 10 V DC (resistive)				
	Contact input power (CW)	Max. 1 W (1 GHz, 50 Ω, V.S.W.R.: Max. 1.25)				
	Max. switching voltage	30 V DC				
	Max. switching current	0.3 A (DC)				
Insulation resista	nce (initial)	500 M Ω (at 500 V DC, Measured portion is the same as the case of dielectric strength.)				
	Between open contacts	500 Vrms for 1 min (detection current:10 mA)				
Dielectric	Between contact and coil	Vrms for 1 min (detection current:10 mA)				
strength (initial)	Between contact sets	500 Vrms for 1 min (detection current:10 mA)				
	Between contact and ground	500 Vrms for 1 min (detection current:10 mA)				
Time	Operate (Set) time	Max. 5 ms at rated coil voltage (at 20 °C, without bounce) [Max. 5 ms (at 20 °C, without bounce)]				
characteristics (initial)	Release (Reset) time	Max. 5 ms at rated coil voltage (at 20 °C, without bounce, without diode) [Max. 5 ms (at 20 °C, without bounce)]				
Shock	Functional	500 m/s² (half-sine shock pulse:6 ms, detection time:10 μs)				
resistance	Destructive	1,000 m/s² (half-sine shock pulse:11 ms)				
Vibration	Functional	10 to 55 Hz (at double amplitude of 3 mm, detection time:10 µs)				
resistance	Destructive	10 to 55 Hz (at double amplitude of 5 mm)				
Expected life	Mechanical life (Cold switch)	Min. 10 x 10 ⁶ (Switching frequency: 180 times/min)				
Conditions Conditions for usage, transport and storage*		Ambient temperature: -30 to +70 °C (Allowable temperature is from -30 to +60 °C at our standard packing condition.) Humidity:5 to 85% RH (Avoid icing and condensation)				
Unit weight		Approx. 3 g				

*For ambient temperature, please read "GUIDELINES FOR RELAY USAGE".

Electrical life (Hot switch)

Conditions: Resistive load, switching frequency 20 times/min


Туре	Load	Switching capacity	Number of operations
2 Form C	High frequency load	1 W (5 GHz, 50 Ω, V.S.W.R.: Max. 1.25)	Min. 10 ⁶
2 FUIII C	Resistive load	10 mA 10 V DC	Min. 10 ⁶


REFERENCE DATA

1. High frequency characteristics (50 Ω , Surface mount terminal)


Sample : ARJ20A12 Measuring method : See "Measuring method" under "NOTES".

V.S.W.R. characteristics

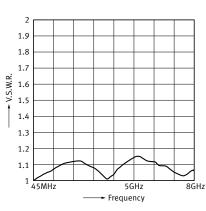

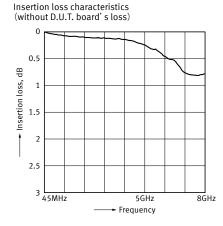

Isolation characteristics

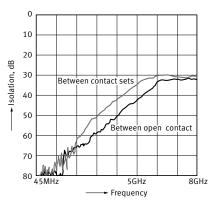


MEASURING METHOD OF HIGH FREQUENCY CHARACTERISTICS

Unit: mm

50 Ω

Measuring method




No. Product name		Contents
1	HP85131-60013	3.5 mm Test port, Extension cable
2	HP83059	3.5 mm Coaxial adapter


- 1) Connect connectors 1 and 2 respectively to PORT1 and PORT2. Perform calibration using the 3.5 mm calibration kit (HP 85052B).
- 2) After calibration, connect the D.U.T board and measure. However, connectors other than those for measurement should be connected with 50 Ω termination resistor.
- Notes: 1. All bottom surface of the base should be touched closely or soldered with PC board ground.

2. 4 ribs should be soldered with PC board ground.

D.U.T board

Material	Glass PTFE double-sided through hole PC board R-4737 (manufactured by our company)
Board thickness	t = 0.8 mm
Copper planting	18 μm

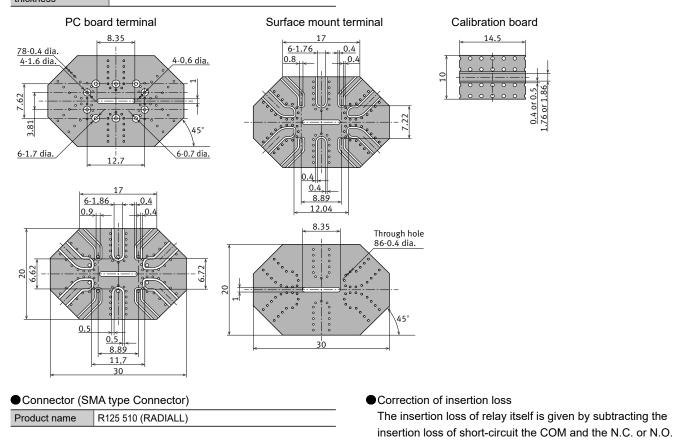


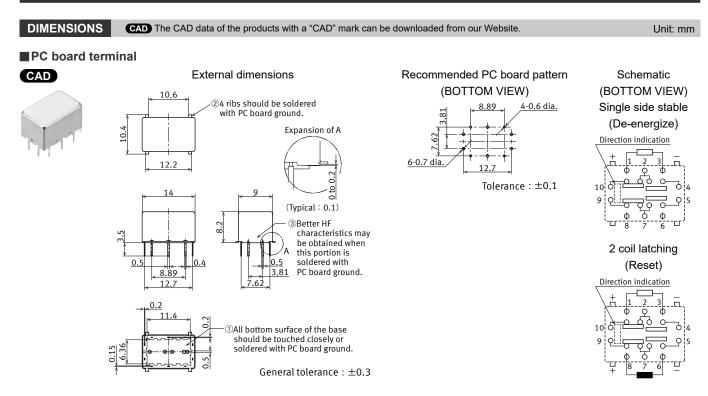


Surface mount terminal




External dimensions

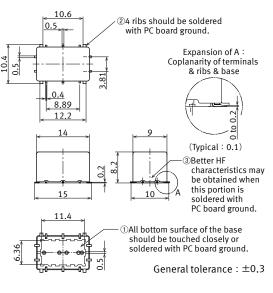

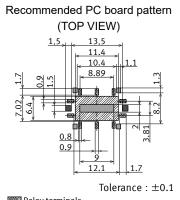


- Relay terminals.
 Ground. Note that soldering is required.
 Ground. Note that you must determine the necessity of solder based on effect of heat when soldering.
- Ground. Note that some extra work is required due to the effect of lifting when soldering.

Schematic (TOP VIEW) Single side stable (De-energize)




2 coil latching (Reset)




PACKING SPECIFICATION

Tape and reel packing

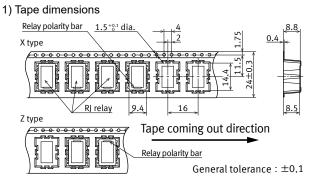

2) Dimensions of plastic reel

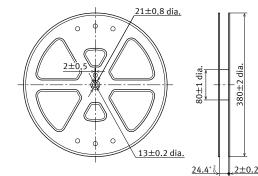

3) Ambient temperature when transporting and during storage with the product in its our standard packaging: -30 to +60 °C

EXAMPLE FOR RECOMMENDED SOLDERING CONDITION

For cautions for use, please read "Relay Soldering and Cleaning Guidelines" and "SMT Soldering Guidelines".

PC board terminal

In case of hand soldering, the following conditions should be observed.

The effect on the relay depends on the PC board used. Please verify the actual PC board to be used.

Automatic soldering (Flow)

Recommended condition	Temperature	Time	Measurement area	Recomment condition
Preheating	Max. 120 °C	Within 120 seconds	Solder surface terminal	Soldering
Soldering	260 ± 5 °C	Within 6 seconds	Solder temperature	


Manual soldering						
Recommended condition	Temperature	Time	Measurement area			
Soldering	Max. 350 °C	Within 3	Tip temperature			

seconds


Surface mount terminal

In case of automatic soldering (reflow), the following conditions should be observed.

Recommended condition	
The number of reflow operation	1 time
Measurement area	Surface of PC board where relay is mounted.



Measuring position of temperature profile



Note : The soldering temperature profile indicates the pad temperature. In some cases, the ambient temperature may be greatly increased. Check for the specific mounting condition.

Other things to observe

- Exceeding the stipulated conditions when soldering may affect coaxial switch performance. Be sure to consult us beforehand.
- · Since thermal stress on a relay will depend on the PC board and process conditions, please be sure to test using the actual PC board.

Mounting cautions

Cautions to observe when mounting temperature increases in the relay are greatly dependent on the way different parts are located a PC board and the heating method of the reflow device. Therefore, please conduct testing on the actual device beforehand after making sure the parts soldered on the relay terminals and the top of the relay case are within the temperature conditions.

- · Creep-up, wettability and solder strength will differ depending on changes in the mounting conditions and type of solder. Please evaluate based on actual production conditions.
- · Only apply coating after the relay has returned to room temperature.

© Panasonic Corporation 2021

6 —

Unit: mm

GUIDELINES FOR USAGE

For cautions for use, please read "GUIDELINES FOR MICROWAVE DEVICES USAGE" and "GUIDELINES FOR RELAY USAGE"

External magnetic field

Cautions for usage of RJ relays

- Latching
 - We recommend latching type when using in applications which involve lengthy duty cycles.
 - Regarding the set and reset pulse time, for the purpose of reliable operation under ambient temperature fluctuations and different operating conditions, we recommend setting the coil applied set and reset pulse time to 20 ms or more at the rated coil voltage.
 - The latching type relay is shipped in the reset position. But jolts during transport or impacts during installation can change the reset position. It is, therefore, advisable to build a circuit in which the relay can be initialized (set and reset) just after turning on the power.

CONDITIONS FOR USE

Conditions for use, transport and storage conditions

During usage, storage, or transportation, avoid locations subject to direct sunlight and maintain normal temperature, humidity, and pressure conditions.


Temperature and humidity

When transporting or storing relays while they are tube packaged, there are cases when the temperature may differ from the allowable range. In this situation, be sure to consult the individual specifications. The humidity range varies with the temperature. Use within the range indicated in the graph. (The allowable temperature depends on the relays.)

· Since RJ relays are highly sensitive polarized relays, their

field. Avoid using the relay under that condition.

characteristics will be affected by a strong external magnetic

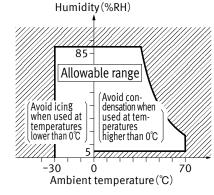

© Panasonic Corporation 2021

For cautions for use, please read "GUIDELINES FOR RELAY USAGE". https://industrial.panasonic.com/ac/e/control/relay/cautions_use/index.jsp

Precautions for Coil Input

Long term current carrying

A circuit that will be carrying a current continuously for long periods without relay or microwave device switching operation. (circuits for emergency lamps, alarm devices and error inspection that, for example, revert only during malfunction and output warnings with form B contacts) Continuous, long-term current to the coil will facilitate deterioration of coil insulation and characteristics due to heating of the coil itself.

For circuits such as these, please use a magnetic-hold type latching relay. If you need to use a single stable relay, use a sealed type relay that is not easily affected by ambient conditions and make a failsafe circuit design that considers the possibility of contact failure or disconnection.

DC Coil operating power

Steady state DC current should be applied to the coil. The wave form should be rectangular. If it includes ripple, the ripple factor should be less than 5%.

However, please check with the actual circuit since the electrical characteristics may vary. The rated coil voltage should be applied to the coil and the set/reset pulse time of latching type relay differs for each relays, please refer to the relay's individual specifications.

Coil connection

When connecting coils of polarized relays, please check coil polarity (+,-) at the internal connection diagram (Schematic). If any wrong connection is made, it may cause unexpected malfunction, like abnormal heat, fire and so on, and circuit do not work. Avoid impressing voltages to the set coil and reset coil at the same time.

■ Maximum allowable voltage and temperature rise Proper usage requires that the rated coil voltage be impressed on the coil. Note, however, that if a voltage greater than or equal to the maximum continuous voltage is impressed on the coil, the coil may burn or its layers short due to the temperature rise. Furthermore, do not exceed the usable ambient temperature range listed in the catalog.

Maximum allowable voltage for coil

In addition to being a requirement for relay operation stability, the maximum continuous impressed coil voltage is an important constraint for the prevention of such problems as thermal deterioration or deformity of the insulation material, or the occurrence of fire hazards.

Ambient Environment

Dew condensation

Condensation occurs when the ambient temperature drops suddenly from a high temperature and humidity, or the relay and microwave device is suddenly transferred from a low ambient temperature to a high temperature and humidity. Condensation causes the failures like insulation deterioration, wire disconnection and rust etc.

Panasonic Corporation does not guarantee the failures caused by condensation.

The heat conduction by the equipment may accelerate the cooling of device itself, and the condensation may occur.

Please conduct product evaluations in the worst condition of the actual usage. (Special attention should be paid when high temperature heating parts are close to the device. Also please consider the condensation may occur inside of the device.)

Icing


Condensation or other moisture may freeze on relays when the temperature become lower than 0 °C. This icing causes the sticking of movable portion, the operation delay and the contact conduction failure etc. Panasonic Corporation does not guarantee the failures caused by the icing.

The heat conduction by the equipment may accelerate the cooling of relay itself and the icing may occur. Please conduct product evaluations in the worst condition of the actual usage.

•Temperature rise due to pulse voltage

When a pulse voltage with ON time of less than 2 minutes is used, the coil temperature rise bares no relationship to the ON time. This varies with the ratio of ON time to OFF time, and compared with continuous current passage, it is rather small. The various relays are essentially the same in this respect.

Current passage time	(%)
For continuousu passage	Tempereture rise value is 100%
ON : OFF = 3 : 1	About 80%
ON : OFF = 1 : 1	About 50%
ON : OFF = 1 : 3	About 35%



Operate voltage change due to coil temperature rise (Hot start)

In DC relays, after continuous passage of current in the coil, if the current is turned OFF, then immediately turned ON again, due to the temperature rise in the coil, the operate voltage will become somewhat higher. Also, it will be the same as using it in a higher temperature atmosphere. The resistance/temperature relationship for copper wire is about 0.4% for 1 °C, and with this ratio the coil resistance increases. That is, in order to operate of the relay, it is necessary that the voltage be higher than the operate voltage and the operate voltage rises in accordance with the increase in the resistance value. However, for some polarized relays, this rate of change is considerably smaller.

Low temperature and low humidity

The plastic becomes brittle if the switch is exposed to a low temperature, low humidity environment for long periods of time. •High temperature and high humidity

Storage for extended periods of time (including transportation periods) at high temperature or high humidity levels or in atmospheres with organic gases or sulfide gases may cause a sulfide film or oxide film to form on the surfaces of the contacts and/or it may interfere with the functions. Check out the atmosphere in which the units are to be stored and transported.

Package

In terms of the packing format used, make every effort to keep the effects of moisture, organic gases and sulfide gases to the absolute minimum.

Storage requirements

Since the surface-mount terminal type is sensitive to humidity it is packaged with tightly sealed anti-humidity packaging. However, when storing, please be careful of the following.

 Please use promptly once the anti-humidity pack is opened.(within 72 hours, Max. 30 °C/70% RH). If left with the pack open, the relay will absorb moisture which will cause thermal stress when reflow mounting and thus cause the case to expand. As a result, the seal may break.

*For RE relays, after this bag is opened, the product must be used within 24 hours.

2) If relays will not be used within 72 hours, please store relays in a humidity controlled desiccator or in an anti-humidity bag to which silica gel has been added.

*If the relay is to be soldered after it has been exposed to excessive humidity atmosphere, cracks and leaks can occur. Be sure to mount the relay under the required mounting conditions

*For RE relays, after this bag is opened, the product must be used within 24 hours.

Caution

This vacuum-sealed bag contains

Moisture Sensitive Products

After this bag is opened, the product must be used

within 72 hours

If product is not used within 72 hours, baking is necessary.

For baking conditions please contact us.

Others

Cleaning

ultrasonic energy.

- Although the environmentally sealed type relay (plastic sealed type, etc.) can be cleaned, avoid immersing the relay into cold liquid (such as cleaning solvent) immediately after soldering. Doing so may deteriorate the sealing performance.
- Surface-mount terminal type relay is sealed type and it can be cleaned by immersion. Use pure water or alcohol-based cleaning solvent.
- Cleaning with the boiling method is recommended (The temperature of cleaning liquid should be 40°C or lower).
 Avoid ultrasonic cleaning on relays. Use of ultrasonic cleaning may cause breaks in the coil or slight sticking of the contacts due to the

3) The following cautionary label is affixed to the anti-humidity pack.

Silicon

When a source of silicone substances (silicone rubber, silicone oil, silicone coating materials and silicone filling materials etc.) is used around the relay, the silicone gas (low molecular siloxane etc.) may be produced.

This silicone gas may penetrate into the inside of the relay. When the relay is kept and used in this condition, silicone compound may adhere to the relay contacts which may cause the contact failure. Do not use any sources of silicone gas around the relay (Including plastic seal types).

NOx Generation

When relay is used in an atmosphere high in humidity to switch a load which easily produces an arc, the NOx created by the arc and the water absorbed from outside the relay combine to produce nitric acid. This corrodes the internal metal parts and adversely affects operation. Avoid use at an ambient humidity of 85%RH or higher (at 20 °C). If use at high humidity is unavoidable, please contact our sales representative.

*RE Relays only

Caution

This vacuum-sealed bag contains

Moisture Sensitive Products

After this bag is opened, the product must be used

within 24 hours

If product is not used within 24 hours, baking is necessary. For baking conditions please contact us.

Please refer to **"the latest product specifications"** when designing your product.

•Requests to customers:

https://industrial.panasonic.com/ac/e/salespolicies/

Please contact

Panasonic Corporation

Electromechanical Control Business Division 1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan industral.panasonic.com/ac/e/



©Panasonic Corporation 2021

Specifications are subject to change without notice.